

Italia - Italy - Italie

Punzoni di prova ufficiali del Banco Nazionale di Prova di Gardone Val Trompia (Brescia)

Official Proof Stamps Gardone Val Trompia Proof House (Brescia-Italy)

Poinçons Officiels du Banc d'Essai National de Gardone Val Trompia (Brescia-Italie)

Punzone distintivo del Banco di Prova di Gardone Val Trompia apposto su tutte le Armi.

Gardone Val Trompia Proof House Stamp (to be stamped on all firearms)

Poinçon du Banc d'Essai de Gardone Val Trompia, estampé sur toutes les armes



Prova definitiva a polvere nera

Black powder proof Stamp

Essai définitif à la poudre noire



Prova definitiva a polvere senza fumo

Smokeless powder proof stamp

Essai définitif à la poudre sans fumée



Prova facoltativa superiore a polvere senza fumo

Optional additional proof with smokeless powder

Essai facultatif supérieur à la poudre sans fumée



Punzone di "Conferma catalogo nazionale delle armi Italiano"

"Italian national catalogue of firearms" stamp

Poinçon du "Catalogue National Italien des Armes"



Punzone di riprova

Reproofing stamp

Poinçon de re-essai



Punzone prova con pallini di acciaio

Steel-shot proof stamp

Poinçon d'essai aux plombs d'acier



Marchio controllo delle munizioni

Ammunition control mark

Marque de contrôle des munitions



F.A.I.R.® srl

Fabbrica Armi Isidoro Rizzini®

Fabrique d'Armes

Arms Factory

Via Gitti, 41 - Casella Postale n° 86

25060 Marcheno (Brescia) Italy

Tel. +39.030.861162 - Fax +39.030.8610179

Partita I.V.A. IT 01689070983

www.fair.it

info@fair.it

www.fair.it

**MANUALE D'USO-OWNER'S MANUAL
MODE D'EMPLOI-HANDBUCH-MANUAL DE USO**



tradition & technology

www.fair.it



100 % ITALIAN MADE



E' vietata la riproduzione, anche parziale, delle immagini e dei marchi illustrati in questo catalogo senza l'autorizzazione della F.A.I.R.® S.r.l.

No part of the images and trademarks illustrated in this catalogue, may be reproduced in any form or by any means without the prior permission of F.A.I.R.® S.r.l.

La reproduction, même si partielle, des images et de marques illustrées sur le présent catalogue n'est permise qu'après l'autorisation de la maison F.A.I.R.® S.r.l.

FUCILI SOVRAPPOSTI MANUALE D'USO

Pag. 3

- Per tutti i modelli da caccia, tiro e sporting
- **Leggere attentamente le istruzioni prima di usare l'arma.**

OVER AND UNDER GUNS OWNER'S MANUAL

Pag. 18

- For all Hunting, Competition and Sporting models
- **Read carefully before using your firearm.**

FUSILS SUPERPOSES MODE D'EMPLOI

Pag. 32

- Pour tous modèles de chasse, tir et parcours de chasse
- **Lisez ces instructions d'emploi attentivement, avant d'employer cette arme**

GEWEHRE MIT ÜBEREINANDERGELAGERTEN LÄUFEN HANDBUCH

Pag. 47

- Für alle Jagd- und Sportmodelle
- **Vor dem Gebrauch der Waffe sorgfältig die Anleitung lesen.**

FUSILES SOBREPUESTOS MANUAL DE USO

Pag. 63

- Para todos los modelos de caza, tiro y deporte
- **Se deben leer atentamente las instrucciones antes de utilizar el arma**

N.	Qtà e DESCRIZIONE
200	2 VITE CALCIOLO
201	1 CALCIOLO
202	1 CALCIO
203	1 CHIAVE D'APERTURA
204	1 SICURA BIGRILLO
205	1 PERNO LEVE SCATTO
206	1 VITE UNIONE SOTTOGUARDIA-BASCULA
207	1 MOLLA PER SICURA
208	1 VITE FERMO MOLLA SICURA
209	1 PIOLO GUIDAMOLLA RICHIAMO CHIAVE
210	1 MOLLA PER CILINDRO FERMO CHIAVE
211	1 CILINDRO FERMO CHIAVE
212	1 PIOLO FERMO CHIAVE
213	1 BASCULA
214	2 VITE FERMO PERNO CERNIERA
215	1 VITE FERMO ESTRATTORE NORMALE
216	1 ESTRATTORE NORMALE
217N	1 MANICOTTO NORMALE
217E	1 MANICOTTO EJECTOR
218	1 BINDELLA SUPERIORE
219	1 TENONE
220	2 BINDELLA LATERALE
221	2 TUBO
222	1 MIRINO
223	1 PORTACINGHIA PER CANNA
224	4 VITE FISSAGGIO PORTACINGHIA CANNA
225	1 VITE GANCIO CROCE
226	1 GANCIO CROCE
227	1 MOLLA DI SPINTA GANCIO CROCE
228	1 GUIDAMOLLA DEL GANCIO CROCE
229	1 CROCE
229 P	1 CROCE CON PULSANTE

N.	Qtà e DESCRIZIONE
230	1 ASTINA
231	1 NASETTO D'ARMAMENTO
232	2 VITE FISSAGGIO CROCE ALL'ASTINA
233	2 PERNO CERNIERA
234	3 SPINA FERMO CHIAVE - PERCUSSORI
235	1 SPINA ELASTICA PER SOTTOGUARDIA
236	1 TASSELLO DI CHIUSURA
237	2 MOLLA PERCUSSORE
238	1 PERCUSSORE SINISTRO
239	1 PERCUSSORE DESTRO
240	2 ASTA PER LEVA DI SCATTO BIGRILLO
241	1 CANE SINISTRO
242	1 CANE DESTRO
243	2 LEVA DI SCATTO BIGRILLO
244	2 MOLLA RICHIAMO LEVA DI SCATTO BIGRILLO
245	1 MOLLA RICHIAMO CHIAVE
246	1 TUBETTO GUIDAMOLLA RICHIAMO CHIAVE
247	1 VITE FERMO TUBETTO GUIDAMOLLA RICHIAMO CHIAVE
248	2 MOLLA DEL CANE
249	1 PORTACINGHIA PER CALCIO
250	1 TIRANTE PER CALCIO
251	1 RONDELLA PER TIRANTE
252	1 GRILLETTO SINISTRO BIGRILLO
253	1 GRILLETTO DESTRO BIGRILLO
254	1 VITE FISSAGGIO GUARDIA
255	1 GUARDIA
256	1 PERNO GRILLETTO
257	1 PERNO CANE
258	1 SOTTOGUARDIA
259	1 GUIDAMOLLA LEVA ARMAMENTO NORMALE
260	1 MOLLA RICHIAMO LEVA ARMAMENTO NORMALE
261	1 LEVA ARMAMENTO NORMALE

N.	Qtà e DESCRIZIONE
262	1 SICURA SELETTIVA PER MONOGRILLO
263	1 BILANCERE
264	1 MOLLA RICHIAMO BILANCERE
265	1-2 SPINA PER MOLLA RICHIAMO BILANCERE E SICURA
266	1 GRILLETTO MONOGRILLO
267	1 MOLLA RECUPERO GRILLETTO MONOGRILLO
268	2 MOLLA RICHIAMO LEVA DI SCATTO MONOGRILLO
269	2 LEVA DI SCATTO MONOGRILLO
270	1 ASTA PER SICURA AUTOMATICA
271	1 SICURA FISSA PER MONOGRILLO NON SELETTIVO
272	1 BLOCCO SUPERIORE MONOGRILLO REGOLABILE
273	1 BLOCCO INFERIORE MONOGRILLO REGOLABILE
274	1 VITE FERMO MONOGRILLO REGOLABILE
275	1 GANCIO CROCE CON PULSANTE
276	1 PULSANTE PER GANCIO CROCE
277	2 VITE TENUTA CARTELLA
278	1 CARTELLA SINISTRA
279	1 CARTELLA DESTRA
280	1 VITE PASSANTE UNIONE CARTELLE
281	2 MOLLA RICHIAMO ESTRATTORE EJECTOR
282	2 GUIDAMOLLA RICHIAMO ESTRATTORE EJECTOR
283	1 ESTRATTORE EJECTOR SINISTRO
284	1 ESTRATTORE EJECTOR DESTRO
285	1 PIASTRINO FERMO ESTRATTORE EJECTOR SINISTRO
286	1 PIASTRINO AGGANCIAMENTO ESTRATTORE EJECTOR DESTRO
287	2 MOLLA PER CILINDRO FERMO PIASTRINO EJECTOR
288	2 CILINDRO FERMO PIASTRINO AGGANCIAMENTO EJECTOR
289	1 PIASTRINO FERMO ESTRATTORE EJECTOR DESTRO
290	2 VITE PIASTRINO FERMO ESTRATTORE EJECTOR
291	1 PIASTRINO AGGANCIAMENTO ESTRATTORE EJECTOR DESTRO
292	1 LEVA ARMAMENTO EJECTOR DESTRA
293	1 LEVA ARMAMENTO EJECTOR SINISTRA



1



2



3



4




5



6



7

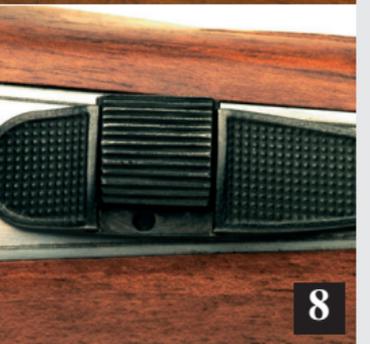

8



9



10



11



12

THIS MANUAL IS EXTREMELY IMPORTANT.

The safety warnings and instructions in this booklet are very important. By understanding the dangers inherent in the use of any firearm, and by taking the precautions described herein, you can use your shotgun in complete safety. However, failure to heed any of the warnings may result in serious damage and injury or death to you or others as well as severe damage to the firearm or other property.

DANGEROUS WEAPONS

Shotguns are classified as "firearms" or "dangerous weapons" and are sold with the specific understanding that the seller is in no way responsible for their illegal, improper or negligent handling or resale under local laws and regulations.

The manufacturer shall not be responsible in any manner whatsoever for malfunction of the firearm, or for physical injury or property damage, resulting in whole or in part from:

1. Criminal or negligent use of the shotgun
2. Improper or careless handling of the shotgun
3. Unauthorised modifications
4. Defective, improperly hand-loaded or reloaded ammunitions
5. Use of ammunitions not complying with CIP regulations or with similar standards issued by equivalent national bodies
6. Neglect
7. Other influences beyond the manufacturer's direct and immediate control.

This limitation applies regardless of whether liability is asserted on the basis of contract, negligence or strict liability (including any failure to warn). Under no circumstance shall F.A.I.R. be liable for incidental or consequential damages, such as loss of use of property, commercial loss and loss of earnings or profits.

SAFETY WARNINGS – NOT JUST FOR BEGINNERS!

- Regardless of your familiarity or experience with firearms, don't assume that you have no need to study this manual.

- The safe handling of firearms requires specialised training, discipline and caution. Firearms, by their own nature and intended function, are deadly instruments. Accidental death or serious injury can result if they are handled improperly or carelessly.
- Firearms rarely cause accidents. Firearm accidents almost always are caused by a failure to obey the basic rules of gun safety. Unfortunately, experienced shooters violate these rules as frequently as beginners. Thus, the basic of safe firearms handling cannot be repeated too often. Read, re-read and memorise the basic principles of firearms safety until they become second nature, habits that you do not forget.
- If you have any question about your knowledge or ability to use this or any other firearm with complete safety, you should seek supervised instructions. Personalised instruction is often available from gun dealers or gun clubs. If none of these sources is accessible, write the National Firearm Association. **THEY WILL ASSIST YOU.**
- A person with a gun in his possession has a full-time responsibility. **HE MUST KNOW** how to keep and use his/her firearm safely and must always **TAKE ALL THE PRECAUTIONS NECESSARY.** He cannot guess, he cannot forget. This responsibility is fully and exclusively his, it can not be passed off to someone else.
- Remember: no gun can be made accident-proof. A gun is just a machine, with no judgement of its own; it responds to your actions, whether wise or foolish. The only true effective safety device is the mind of a cautious shooter who never forgets that a moment carelessness can produce permanent tragedy.

ALL GUNS ARE NOT ALIKE

Many makes and models of firearms may LOOK very similar. However, they differ widely in design and operation, and in the location and function of various controls. Study this manual thoroughly. Learn all the characteristics and operation of your particular firearm before attempting to handle it. Do not permit others to handle it, unless they also have done so. You should have an instruction manual for every firearm you own. If you do not, write the manufacturer and obtain one. Most manufacturers will gladly send you one free. If for any reason a manual is not available, visit your library. Many books have been published which contain detailed information on obsolete or discontinued firearms.



YOUR KNOWLEDGE CAN PREVENT INJURIES.

This shotgun was designed and is made to offer the maximum of safety when correctly used. However, as with any other weapon, it is not foolproof and may become very dangerous if the following basic recommendations are not **RIGIDLY OBSERVED**:

READ CAREFULLY

1. Never, never point any gun, loaded or unloaded, at anything you do not intend to shoot.
2. Always treat every gun as if it were loaded.
3. Before using any gun, get instruction from a competent firearms instructor.
4. The safety is only a mechanical device, not a substitute for common sense.
5. Keep your fingers **OFF** the trigger until you are actually aiming at the target you intend to shoot.
6. Be certain the gun is unloaded before cleaning, changing chokes or storing.
7. Always empty the gun before entering a vehicle or an inhabited building
8. Never leave a loaded gun unattended.
9. Store guns and ammunitions separately, beyond the reach of children, in a locked container, cabinet, closet or room.
10. Never test the safety by pulling the trigger while the safety is on, unless you are absolutely sure the gun is empty and you are pointing it away from everyone.
11. Be sure of your target before you shoot.
12. Do not mix guns and alcohol or drugs.
13. Never pull a gun towards you by the muzzle. Do not climb a tree or cross a fence with a loaded gun.
14. Load and unload your gun outdoors, with the muzzle pointed in a safe direction.
15. If your gun fails to fire when the trigger is pulled, keep it pointed at the target for at least 30 seconds. Sometimes slow primer ignition will cause a "hang-fire" and the cartridge will go off after a short pause.
16. Never shoot at hard, flat surfaces or water. The slug or shot charge may ricochet.
17. When receiving a gun, always check to see that it is unloaded.

18. Never put your hands or any other part of your body over the muzzle of a gun, or allow it to point at any other person. No harm should result if you obey this rule, even if an accidental discharge occurs.

19. Check ammunition to be sure it is the right caliber or gauge for your gun, and that it is not damaged or malformed. Keep in mind that a 20 gauge shell will fall through the chamber of a 12 gauge gun and lodge in the barrel. If a 12 gauge shell is then chambered and fired, the barrel may burst causing death or serious injury.

20. Always leave the safety on until you are ready to shoot.

21. Dry firing may damage your gun and is not recommended.

22. If there is any reason to suspect that something is obstructing the barrels, immediately unload the firearm and look through both bores. It is not sufficient to merely look in the chambers.

23. Treat this gun as a precision instrument.

24. Old or reloaded ammunition may be dangerous. We recommend against using it.

25. Don't try to change your gun's trigger pull, because alteration of trigger pull usually affects sear engagement and may cause accidental discharge. Altering your gun in any way may also void your warranty.

26. Before using "Steel-Shot" ammunition, check whether your gun is marked with the "French Lilly" symbol, (see Picture.1), meaning that your gun was designed for this kind of ammunitions.

Write to us concerning any questions regarding items or circumstances which might relate to your safety and the operation of our products.

WARNING!

F.A.I.R. shotguns were manufactured to perform properly with the original parts as designed. Your gun is a complex tool, with many parts that must relate correctly to other parts. Putting a gun together wrong or with modified parts can result in a damaged gun, danger and injury or death to you and others caused by malfunction. Repair work should only be done by the manufacturer or a qualified gunsmith approved by the manufacturer. Unauthorised repair will void your warranty.



PROTECT YOUR EYES AND EARS (See Picture 2)

Always wear adequate shooting glasses and ear plugs or ear protectors when you are shooting.

Always make certain that persons close to you are wearing similar protections. Unprotected eyes may be injured by powder gas, carbon residues, lubricants, metallic particles or similar debris which may emanate occasionally from any firearm in normal use. Moreover, without ear protection, repeated exposure to shooting noise may lead to permanent hearing loss.

AMMUNITION

1. Use only high quality, original, factory-manufactured shotgun shells, complying with CIP requirements or other similar national standards. Do not use cartridges that are dirty, wet, corroded, malformed or damaged. Do not oil cartridges or spray aerosol type lubricants, preservatives or cleaners directly onto cartridges or where excess spray may flow into contact with cartridges.

Lubricants and other foreign materials on cartridges can cause potentially dangerous ammunition malfunctions. Use only ammunitions of the gauge or caliber for which the firearm was chambered.

2. The use of reloaded, "remanufactured", hand-loaded or other non-standard ammunition voids all warranties. Improperly loaded ammunition can be extremely dangerous and may cause severe damage to the firearm and serious injury to the shooter or to others. Always use ammunition that complies with the industry performance standards established by CIP or other equivalent national bodies for other countries.

3. Firearms may be severely damaged and serious injury to the shooter or to others may result from any condition causing excessive pressure inside the chamber or barrel during firing.

Excessive pressure can be caused by obstructions in the barrel, propellant powder overloads or by the use of incorrect or defectively assembled cartridges.

In addition, the use of a dirty, corroded or damaged cartridge can lead to a burst cartridge case and consequent damage to the firearm and personal injury from the sudden escape of high-pressure propellant gas from the firearm's mechanism.

4. If:

- You have difficulty or feel unusual resistance in chambering a cartridge, or
- A cartridge misfires or does not go off, or
- The mechanism fails to extract a fired cartridge case, or
- Unburned grains of propellant powder are discovered spilled in the mechanism, or
- A shot sounds weak or abnormal, immediately stop shooting and check for possible obstructions in the barrels. In such cases it is possible that a wad is lodged part way down the barrel. Firing a subsequent shot into the obstructed barrel can wreck the firearm and cause serious injury to the shooter or to bystanders.
- If there is any reason to suspect that something is obstructing the barrel (this can be anything – dirt, mud, snow, sand, water, a wad etc.) immediately unload the firearm and look through both bores. It is not sufficient to merely look in the chambers. An obstruction may be lodged some distance down the barrel, where it can not easily be seen.

IF SOMETHING IS IN THE BORE, DO NOT ATTEMPT TO SHOOT IT OUT BY USING AN OTHER CARTRIDGE OR BY BLOWING IT OUT WITH A BLANK OR A SHELL FROM WHICH THE SHOT HAS BEEN REMOVED. SUCH TECHNIQUES CAN GENERATE EXCESSIVE PRESSURE, DAMAGE THE FIREARM AND CAUSE SERIOUS PERSONAL INJURY.

- Dirt corrosion or other foreign matter on a cartridge can impede complete chambering and may cause the cartridge case to burst upon firing. The same is true of cartridges that are damaged or deformed.
- Do not oil cartridges and be sure to wipe the chamber clean of any oil or preservative before commencing to shoot. Oil interferes with the friction between cartridge case and the chamber wall that is necessary for safe functioning and subjects the firearm to stress similar to that imposed by excessive pressure.
- Use lubricants sparingly on the moving parts of your firearm. Avoid excessive spraying of any aerosol gun care product, especially where it may get on ammunition. All lubricants and aerosol spray lubricants in particular can penetrate cartridge primers and cause misfires. Some highly penetrative lubricants can also migrate inside the shell cases and cause deterioration of the propellant powder: on firing, the powder may not





ignite. If only the primer ignites, there is the danger that the wad may become lodged in the barrel.

WARNING!

Discharging firearms in poorly ventilated areas, cleaning firearms or handling ammunitions may result in exposure to lead and other substances known to cause birth defects, reproductive harm and other serious physical injury. Have adequate ventilation at all times. Wash hands thoroughly after exposure.

HOW TO OPERATE THE SAFETY – WARNING!

Prior to firing, know and understand the operation of the safety by practising with the shotgun unloaded. The safety is a rectangular sliding switch located on the tang of the action, directly behind the top lever of the shotgun, which slides forward and backward. When the switch is at the rear end of its travel, the letter "S" appears immediately in front of the switch (see Picture 3). This means that the shotgun will not fire when the trigger is pulled. When the switch is in its forward-most position, the "S" is covered, which means the shotgun is NOT ON SAFE and will fire when the trigger is pulled. (see Picture 4).

Warning

The safety switch on your F.A.I.R. shotgun, may not be automatic. In other words, it does not automatically go to the SAFE position when the shotgun breech is opened and closed, but it must be manually moved to the SAFE position. Never try to put the safety switch between the SAFE and FIRE positions. Unless the safety is positioned all the way forward or all the way to the rear, you can not be certain whether it is on SAFE or FIRE. The safest way to carry this shotgun is WITH NO shells in the chamber. If you feel that you must carry the shotgun with shells in the chambers, then the safety MUST BE ON SAFE ("S"). When you are ready to fire, the safety can quickly be moved to the FIRE position. The only time when the safety should be placed in the FIRE position is when you intend to shoot.

Warning

Never disassemble the safety mechanism. It has been correctly designed, fitted and tested. Any mechanical device can fail, however, so never rely on the safety to justify careless handling or use. Never use a firearm if the safety does not function properly.

HOW TO LOAD YOUR F.A.I.R. SHOTGUN

Warning

Never attempt to load your gun with ammunition that does not meet the cartridge designation stamped on the inside of the action (see Picture 5). This designation is only visible when the shotgun's action is open.

Warning

Before loading this shotgun, always check the bores to be sure they are free of grease, oil or any other obstruction. Be sure the chambers are empty and the safety is on SAFE.

- Before opening the action of the shotgun, make sure that the gun is pointed in a safe direction. With one hand, move the top lever to the right as far as it will go (see Picture 6) (don't use excessive force, the lever should move easily). With the other hand, pull down on the barrels until the action is fully open. Insert one or two shells of the proper gauge into the chambers.
- Keeping your fingers away from the trigger and out of the action, close the action by pulling up on the barrels until it snaps shut. Do not use excessive force in closing the action, it should close easily and you should hear an audible "click" as the action locks. When the action is closed and locked, the top lever will return to its former position (Picture 7) pointing straight to the rear. If it does not do so, do not attempt to fire the gun, as the action is not fully locked and damage to the gun and serious injury to you or others may result.
- Closing the action automatically cocks the firing pins on both barrels. As soon as the action is loaded and fully closed, the gun is cocked and ready to fire. Unless you intend to fire the gun as soon as it is loaded, the safety switch should be kept in the SAFE position.



HOW TO FIRE

With the gun pointed at the target, move the safety to the FIRE position (all the way forward), aim, and pull the trigger. The selected barrel will fire. To fire the second barrel, pull the trigger again. If you don't fire both shells, be sure to put the safety on SAFE until you are ready to shoot again.

FIRING SEQUENCE for guns equipped with SELECTIVE SINGLE TRIGGER

The safety switch on the tang of your shotgun has a dual function. In the center of the switch there is a button that can be moved to the left and to the right. The position of this button determines which barrel will fire first when the trigger is pulled. When the button is moved to the right (Picture 8) a single black dot is revealed, which means that the bottom barrel has been selected to fire first. If the trigger is pulled again, the top barrel will then fire. If the shooter wishes the top barrel to fire first, the button should be moved to the left, revealing two black dots (see Picture 9).

EJECTORS (when provided)

Some shotguns are fitted with automatic ejectors (see Picture 10) that eject fired shells when the action is opened. The ejectors will not eject unfired shells. If two shells are loaded but only one has been fired, only the fired shell will be ejected.

Warning

Take care not to point the rear of the action toward yourself or another person when opening the action. The fired shells are rejected with enough force to cause possible eye injury.

HOW TO UNLOAD THE SHOTGUN

With the safety in SAFE position, and the shotgun pointed in a safe direction, open the action and manually remove the unfired shells from the chambers. The ejectors will pull the shells from the chambers far enough that you can reach them with your fingers.

Warning

Before placing the shotgun in a vehicle or returning it to storage, always unload it and visually inspect the interior of the chambers to make sure that they are empty.

WHAT TO DO IF SHOTGUN FAILS TO FIRE

1. Misfires: if you squeeze the trigger and the cartridge does not fire, remain in the shooting position and count to 30. Then move the safety switch to SAFE and open the action to remove the misfired cartridge from the gun.

2. Underpowered shot: an underpowered cartridge is unusual if the ammunition is fresh, clean and factory loaded. However, if you hear an unusual sound or low report, you should stop immediately and proceed as follows:

- As the wad and powder from the shell may still be in the barrel, you must unload the gun completely and then look through both barrels from the action end (not from the muzzle) to see if there is any obstruction. A wad can usually be removed with a cleaning rod. If not, it or any other stubborn obstruction should be removed by an authorised gunsmith.

HOW TO CLEAN YOUR SHOTGUN

Warning

- Before cleaning the gun, be certain that it is completely unloaded and the action is open.
- Never attempt to clean a loaded firearm. Follow "How to Unload" instructions before cleaning.
- Regular, proper cleaning of your shotgun will help to extend its useful life and assure proper functioning. Cleaning is especially important if the gun gets wet or if foreign material gets into action or barrels.
- To clean the chambers and bores, you will need a standard commercial shotgun cleaning rod, a bronze bore bush of the proper diameter, a powder solvent and cleaning patches. Never use a steel bore brush as it may damage the bore. It is usually wise to use a solvent that also removes the traces of plastic that are sometimes



left in the bores during the passage of wads.

- First, run a patch saturated with solvent through the bores and let it stand for a few minutes. Then run the bronze brush through the bores, followed by clean, dry patches. Use additional dry patches until they come out clean. If necessary, repeat the entire procedure. Finally, run a patch through the bores that has been saturated with light gun oil to protect them from rust.
- Dry and clean the outer surfaces of the gun with a soft cloth, removing all moisture and fingerprints. You may find an old toothbrush useful for cleaning hard-to-reach crevices. Finally, apply a light coat of gun oil to the action and all external metal surfaces. Do not over-oil. Applying a small amount of light gun grease to the action hinges and to the surfaces where the metal of the forearm and the action meet once or twice a year (more often if the gun is heavily used) will help to make the gun open and close smoothly.
- Occasionally rubbing in a light coat of line seed oil, will help to keep the wood of the stock in good condition and preserve its beauty.

DISASSEMBLING INSTRUCTIONS

If you wish to disassemble the gun for transport or storage, proceed as follows:

1. Place the safety switch to SAFE
2. Make sure the shotgun is unloaded
3. In the center of the underside of the forearm stock, there is a release lever located in an oval depression in the wood (Picture 11) or a release button positioned at the top end of the forearm (see Picture 12). To remove the forearm, push the button or pull the release lever toward the rear of the gun while pulling the front end of the forearm away from the barrels. Move the top lever to the right and open the action. The barrels may then be lifted away from the action.
4. Reassemble in reverse order. It is not necessary to pull the release lever when re-installing the forearm. Place the rear end of the forearm position, then push the forearm toward barrels. It should snap easily into place. Do not use excessive force.

NOTE: Further assembly of your shotgun is not recommended and should be done only by an authorised gunsmith or by F.A.I.R.

During freezing conditions, oil may congeal and cause sluggish operation of your gun, therefore it is recommended that only a very thin coat of light oil be used in these conditions.

Condensation droplets of water may form soon after a cold firearm is brought into a warm room. The gun may also become wet during inclement weather. In these cases all moisture should be removed immediately to avoid the formation of rust. Exterior metal finishing may be wiped down with a lightly oiled cloth.

For long term storage, lightly oil the bore, barrel and action with gun oil. Your firearm should be completely unloaded and stored in a dry area. Never store your shotgun in a carrying case.

USE OF STEEL SHOTS

only for Steel-shot proofed guns, stamped with the French Lily symbol on the barrel (see Picture 1)

Warning

Steel shots are substantially harder than lead shots. They are enclosed in a plastic wad to help protect the barrel from scoring by the hard steel shot. However, when the steel shot charge passes through the choke constriction in the barrel, the barrel or screw-in choke may be damaged if a tightly constricted choke is in place. For that reason, we strongly recommend that a choke of no greater constriction than Modified (***) be used when firing steel shots. Use of an Improved Modified (***) or Full (*) choke when firing steel shots will void your warranty.

TECHNICHOKE® SYSTEM

The TECHNICHOKE® interchangeable choke system allows you to match the choke of your gun to expected shooting conditions, or to quickly change the choke when you need to adapt the gun to different conditions at the range or in the field.



F.A.I.R. 12-16-20-28 gauge shotguns come equipped with three or five different interchangeable screw-in or extended chokes, depending on model. Each choke set also includes a choke wrench to facilitate switching of chokes. We recommend that a thin coating of light gun grease be applied to the threads of chokes before they are installed in the barrel.

CHOKE SELECTION BY "TOUCH"

A unique notching system allows TECHNICHOKES® to be easily identified in minimal light conditions, as shown in the following chart:

Number of slots on choke tube	Type of choking	Choke Designation	Type of choking
I	0	Full	1 / 1
II	00	Improved Modified	3 / 4
III	000	Modified	1 / 2
IIII	0000	Improved Cylinder	1 / 4
IIIII	Skeet	Skeet	Skeet
No slots	CL	Cylinder	0 / 0

Warning

Always unload your shotgun and open the action before changing chokes. NEVER fire your shotgun without a choke installed as doing so may damage the threads and/or the barrels. Always make sure the choke is firmly screwed into the barrel, but do not overtighten. Never use a choke that is bent or out-of-round. Replacement chokes may be purchased from F.A.I.R.

F.A.I.R. OVER-AND-UNDER SHOTGUNS

THREE BASIC RULES FOR A SHOTGUN OWNER

Most of firearm accidents are caused by the careless violation of one of the following basic rules:

1. Always keep the barrel pointed in a safe direction
2. Always treat every gun as if it were loaded
3. Always store your gun locked in a safe place when not in use.

IMPORTANT: ALWAYS KEEP THIS MANUAL AND NEVER THROW IT OUT

Keep this manual together with your shotgun and in case of sale, deliver it to the new owner together with the gun.



SINCE 1971



FAIR

- *We certify that this shotgun was proofed in compliance with C.I.P (Commission Internationale Permanente) regulations; such proofs were performed by the National Proof House for Firearms in Gardone Val Trompia (Brescia – Italy). Proof marks and barrel weight, length and diameter of cartridge chamber and barrel diameter at 23 cm from the breech are stamped on the action and barrel.*



